

Empstern

COFFEE MAKER

INSTRUCTION MANUAL



MODEL: EM-CB2

Read this manual thoroughly before using and save it for future reference

YOUCHUANGDAPIN Electronic Technology Limited

**K2,24th Floor, Block B, Pacific Commercial Building, No. 4028, Jiabin Road, Heping Community,
Nanhu Street, Luohu District, Shenzhen**

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using check that the voltage of wall outlet corresponds to rated voltage marked on the rating plate.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
5. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Place appliance on flat surface or table, do not hang power cord over the edge of table or counter.
9. Ensure the power cord do not touch hot surface of appliance.
10. Do not place the coffee maker on hot surface or beside fire in order to avoid to being damaged.
11. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
12. Do not use appliance for other than intended use and place it in a dry environment.
13. Close supervision is necessary when your appliance is being used near children.
14. Be careful not to get burned by the steam.
15. Do not touch the hot surface of appliance (such as steam wand, and the steel mesh just boiling). Use handle or knobs.
16. Do not let the coffee maker operate without water.
17. Do not use the water tank at temperatures higher than 70°C, and do not use the tank to store food.
18. Do not remove the metal funnel when appliance in brewing coffee or making steam.
19. Connect plug to wall outlet before using and turn any switch off before plug is removed from wall outlet.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
21. Children should be supervised to ensure that they do not play with the appliance.
22. This appliance is intended to be used in household
23. Do not use outdoors.
24. Save these instructions.
25. If you do not use the product for a long time, you need to turn on the power and then release steam for 3 minutes before leaving this product.
26. If you cut off power during steam release, residual heat will make product continue to release steam

for a length of time, the product will stop releasing steam immediately once you turn off steam knob.

27. Scalding may occur if the lid is removed during the brewing cycles.

28. **WARNING:** To avoid the risk of injury, do not open the brew chamber during the brew process.

29. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

30. **WARNING:** The filling aperture must not be opened during use.

Power cord:

a) A short power-supply cord (or detachable power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

c) If a long detachable power-supply cord or extension cord is used:

 
1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;

2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and

3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.


Save these instructions..

KNOW YOUR COFFEE MAKER (The product is subject to change without prior notice)

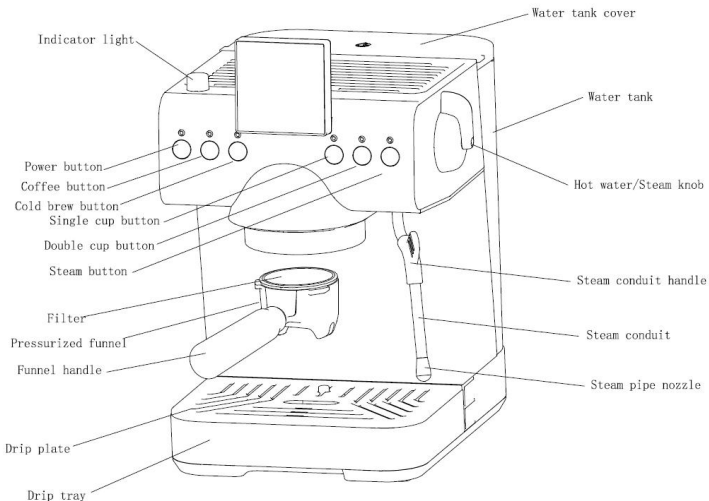

Digital tube display instruction

 - a. Brew coffee time
- b. System pressure (pressure value flashes when water shortage occurs)
- c. Coffee volume
- d. System temperature
- e. Single-cup coffee
- f. Double-cup coffee
- g. Brewing coffee process

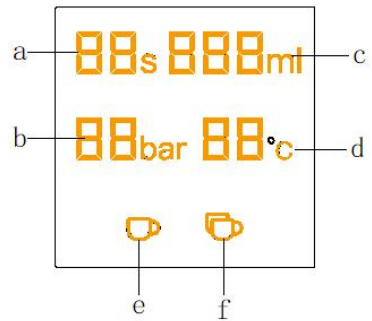

BEFORE THE FIRST USE

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

1. Remove the rubber plug from the bottom of the water tank.
 2. Pour water into water tank, the water level should not exceed the “MAX” mark in the tank.
Note: the appliance is supplied with a detachable tank for easy cleaning, you can fill the tank with water firstly, and then put the tank into the appliance.
 3. Set steel mesh into metal funnel (no coffee in steel mesh).
 4. Place a jug on removable shelf. Make sure the steam control knob is on the OFF position.
 5. Connect to power supply and press the power button once, the power indicator illuminates and the appliance enters to preheat mode. Then the yellow indicator on the top illuminates, and the preheating is finished when the coffee indicator turns solid.
 6. Press the double-cup button once, and the water flows out from the funnel outlet after a while. When the appliance automatically stops pumping water, you can clean the accessories and then pour out the wastewater.
- Note: To make cold brew coffee, press the cold brew button directly after turning on the coffee maker. The indicator on the top turns to be blue. Then press the double-cup button to let the appliance produce water. Pour out the wastewater after cleaning the accessories.

PREPARE TO MAKE COFFEE

Hot drink: To make a cup of good hot Espresso coffee, we recommend you preheating the appliance before making coffee, including the funnel, filter and cup, so that the coffee flavour can not be influenced by the cold parts.

Cold drink: Add cold water to the tank about 10-15°C, press the cold brew button, and then press the button of single cup or double cup to make cold drink.

1. Remove the detachable tank to fill it with desired water, the water level should not exceed the “MAX” mark in the tank. Then place the tank into the appliance properly.
2. Select the steam mesh, set steel mesh into metal funnel, make sure the tube on the funnel aligns with groove in the appliance, then insert the funnel into the appliance from the “Insert” position, and you can fix them into coffee maker firmly through turn it anticlockwise until it is at the

“Lock” position.

3. Place an espresso cup on removable shelf.
4. Then connect the appliance to power supply. Make sure the steam control knob is on the close position.
5. Connect to power supply and press the power button once, the power indicator illuminates. If you want to make hot drinks only, press the coffee button and let the appliance enter to preheating mode. When the coffee indicator stays solid, the preheating is finished. If you want to make cold drinks, press the cold brew button, and the cold brew indicator stays solid. The cold brew mode does not require preheating.

ESPRESSO EXTRACTION GUIDE

A cup of good coffee should keep the balance of acidity, aroma, concentration, and bitterness. And a cup of quality espresso requires appropriate coffee powder coarseness and tamping force.

1. Turn clockwise to remove the funnel, put the filter inside the funnel. Pour the ground coffee powder into the filter, and then use a tamper to press the powder to make it flat. Then wipe off the excess coffee powder from the edges of the funnel and filter.

Warning: Remember to cool down the heated metal filter to avoid burns.

Add coffee powder


Put the filter inside the funnel as described above:

- 1.a. Load the filter with freshly ground espresso coffee powder;
 - b. Tamp the powder gently (It is recommended to add 14g powder for single-cup coffee, and 20g for double-cup coffee. If the funnel is filled with excessive powder, it will be failed to be installed to the appliance, and the coffee flow rate will be quickened, affecting coffee taste and causing large water content in the coffee grounds.)
 - c. Wipe off the remaining coffee powder on the edge.
2. Install the funnel according to the “insert” marking on the coffee maker, and turn it counterclockwise to “lock” marking on the coffee maker.
3. Place a warm cup on the cup coaster. (Boil hot water to warm cup and pour it out before brewing coffee. Cold drink making does not need to warm cup.)
4. Press single-cup or double-cup button once, coffee will flow out from the outlet.
5. The appliance stops automatically when the set coffee volume is reached, and the coffee production is finished.
6. The optimal brewing pressure for espresso is 8-13 bar. A cup of good coffee can be made when the digital tube shows the optimal pressure range. If the current pressure exceeds the standard, please adjust the powder coarseness and powder tamping pressure.

WARNING: Do not leave the coffee maker unattended during making the coffee, as you need operate manually sometimes!

7. Wait for a moment after coffee production, and turn the funnel clockwise to remove it from the appliance, pour out the coffee grounds.
8. Allow the funnel and filter to cool sufficiently, then rinse thoroughly with clean water.


MAKE HOT WATER

After finish preheating, turn the knob to “” position, and then the hot water will dispense from steam wand. When desired amount of hot water is got, turn the knob off. Before making hot water, put a cup under the steam wand.

MAKE CAPPUCCINO/FROTH MILK

You get a cup of cappuccino when you top up a cup of espresso with frothed milk.

Method:

1. Make a cup of espresso with the provided milk cup by following the instructions in “ESPRESSO EXTRACTION GUIDE”.
2. Press the steam button once, the steam indicator flashes like a breathing light. When the steam indicator stays solid, the steam preheating is completed.
3. Add about 150ml refrigerated whole milk in the latte art pitcher (Do not use hot milk).
4. Extend the steam pipe into milk. Turn the knob to “”, and the steam is emitted from the steam pipe. Move the steam pipe to the position close to the surface of the milk, and tilt the steam pipe at a certain angle with the milk to allow air enter to the liquid and start frothing. (Before milk frothing, use an extra empty cup to collect the steam for 10s until the steam dispensing becomes stable)
5. Turn the knob back to “OFF” position.

WARNING: Clean the steam nozzle in time with a damp cloth after steam dispensing, be careful of burns!

6. Pour the milk and foam into the prepared espresso to make a Cappuccino. You can also add an appropriate amount of sugar or sprinkle some cocoa powder on top according to your taste.

STOP/SLEEP FUNCTION

1. The water pump stops automatically and coffee indicator flashes quickly when the hot water is dispensed 200ml.
2. The water pump stops automatically and steam indicator flashes quickly when the steam function is run for 180s.

3. In any state after the machine is powered on, if there is no operation within 25 minutes, the machine will enter sleep mode, at this time, all indicators will be extinguished, the heating element will not be heated, and the whole machine will be powered off. Press any button to exit the sleep mode and restart the machine.

CLEANING AND MAINTENANCE

1. Unplug the power socket and cool down the machine completely before cleaning.
2. Wash the body of the coffee maker with a moisture-proof sponge, and regularly clean and dry the water tank, drip tray, and removable coaster.

Note: Do not use alcohol-based or solvent-based cleaners for cleaning. Do not immerse the main unit in water.

3. Remove the funnel and pour out the coffee grounds. Clean the funnel and filter with cleaning solution and cotton cloth, and rinse the parts.
4. Rinse all the accessories under water and dry thoroughly.
5. Clean the steam nozzle and filter with cleaning probe on a regular base.

Any other servicing should be performed by an authorized service representative.

CLEANING MINERAL DEPOSITS

1. When the cumulative water consumption of coffee, steam, and hot water functions exceeds 30L, all indicators of the product will flash 5 times at the same time to indicate the need for descaling, and then return to normal. If you do not cancel, the prompt will flash 5 times after each power on and preheating.

2. When descaling prompt appears, you need to add an appropriate amount of descaling agent to the water tank, and use hot water and coffee function to descale. If you do not perform descaling, the indicator will flash 5 times after each power on. And if there is no manual prompt canceling after 3 times, the descaling reminder will be automatically removed.

3. Cancel descaling prompt: press and hold the power button and steam button at the same time for 3s, all indicators flash quickly for 3 times.


TROUBLE SHOOTING

Symptom	Cause	Corrections
The metal parts in the tank have rust.	The descaler is not recommended type. It may corrode the metal parts in the tank.	Use the descaler recommended by manufacturer.
Water leaks from the bottom	There is much water in the drip tray.	Please clean the drip tray.

of coffee maker.	The coffee maker is malfunction.	Please contact with the authorized service facility for repairing.
Water leaks out of outer side of filter.	There is some coffee powder on filter edge.	Get rid of them.
Acid (vinegar) taste exists in Espresso coffee.	No clean correctly after cleaning mineral deposits.	Clean coffee maker per the content in “before the first use” for several times.
	The coffee powder is stored in a hot, wet place for a long time. The coffee powder turns bad.	Please use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
The coffee maker cannot work any more.	The power outlet is not plugged well.	Plug the power cord into a wall outlet correctly, if the appliance still does not work, please contact with the authorized service facility for repairing.
The steam cannot froth.	The steam ready indicator is not illuminated.	Only after the steam ready indicator is illuminated, the steam can be used to froth.
	The container is too big or the shape is not fit.	Use high and narrow cup.
	You have used skimmed milk	Use whole milk or half-skimmed milk

Do not take apart the appliance by yourself if the cause of failure is not found, you had better contact certified serving center.

 Environment friendly disposal

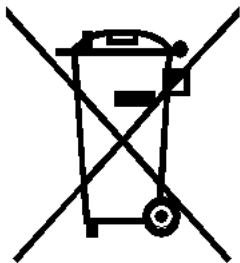

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.



Empstorm

使用說明書



型號：EM-CB2

在使用前請仔細閱讀本手冊，並保存以備將來參考

深圳市優創達品電子科技有限公司

深圳市羅湖區南湖街道和平社區嘉賓路 4028 號太平洋商貿大廈 B 座 24K2 號

重要安全事項

在使用本電器前，請遵循以下基本注意事項：

1. 閱讀所有說明。
2. 使用前請確認牆壁插座的電壓是否與銘牌上的額定電壓相符。
3. 不要觸摸熱表面，請使用把手或旋鈕。
4. 為防止火災、觸電及人身傷害，請勿將電源線、插頭浸入水中或其他液體中。
5. 清潔前及不使用時請拔下插頭。待設備完全冷卻後再拆卸、安裝部件或進行清潔。
6. 若電源線或插頭損壞，或設備故障，或跌落損壞，請勿使用本電器。將其送至最近的授權維修中心進行檢查、維修或電氣、機械調整。
7. 使用非製造商推薦的附件可能會導致火災、觸電或人身傷害。
8. 將電器放置在平坦的表面或桌子上，勿將電源線懸掛在桌子或櫃檯邊緣。
9. 確保電源線不接觸電器的熱表面。
10. 確保電源線不接觸電器的熱表面。
11. 斷開電源時，請拔出插頭。請始終抓住插頭，不要拉扯電源線。
12. 請勿將電器用於非預期用途，並將其放置在乾燥的環境中
13. 本電器靠近兒童使用時需嚴密監督。
14. 小心被蒸汽燙傷。
15. 請勿觸摸電器的熱表面（如蒸汽棒和剛煮沸的鋼網）。請使用把手或旋鈕。
16. 請勿在無水狀態下操作咖啡機。
17. 請勿將水箱的溫度設置超過 70°C，也請勿將水箱用於存放食物。
18. 煮咖啡或製作蒸汽時，請勿取下金屬漏斗。
19. 使用前將插頭插入牆壁插座，並在拔出插頭前關閉所有開關。
20. 本電器不適合由身體、感官或心理能力較弱或缺乏經驗和知識的人（包括兒童）使用，除非有負責其安全的人提供監督或指導。
21. 需監督兒童以確保他們不會玩弄電器。
22. 本電器僅限家庭使用。
23. 請勿在室外使用。
24. 請保存這些說明。
25. 如果長時間不使用產品，需開啟電源並釋放蒸汽 3 分鐘後再關閉產品。
26. 如果在蒸汽釋放過程中切斷電源，餘熱將使產品繼續釋放蒸汽一段時間，一旦關閉蒸汽旋鈕，產品會立即停止釋放蒸汽。
27. 在沖煮過程中如果取下蓋子，可能會造成燙傷。
28. 警告：為避免受傷，請勿在沖煮過程中打開沖煮室。
29. 本電器配有一個極性插頭（插頭的一片比另一片寬）。為減少觸電風險，此插頭只能以一種方式插入極性插座。如果插頭無法完全插入插座，請反轉插頭。如果仍然無法插入，請聯繫合格的電工。請勿試圖以任何方式修改插頭。
30. 警告：在使用過程中請勿打開加水口。

 
電源線：

- a) 提供短電源線（或可拆卸電源線）以減少因纏繞或絆倒長電線而引發的風險。
- b) 可以使用較長的可拆卸電源線或延長線，但需注意使用安全。
- c) 如果使用較長的可拆卸電源線或延長線，應注意以下幾點：

- 1) 可拆卸電源線或延長線的標稱電氣額定值應至少等於電器的電氣額定值；
- 2) 如果電器是接地型的，延長線應為接地型三線電纜；
- 3) 較長的電線應布置好，以防止兒童拉扯或絆倒。


保留這些說明。

認識您的咖啡機（產品如有變更，恕不另行通知）

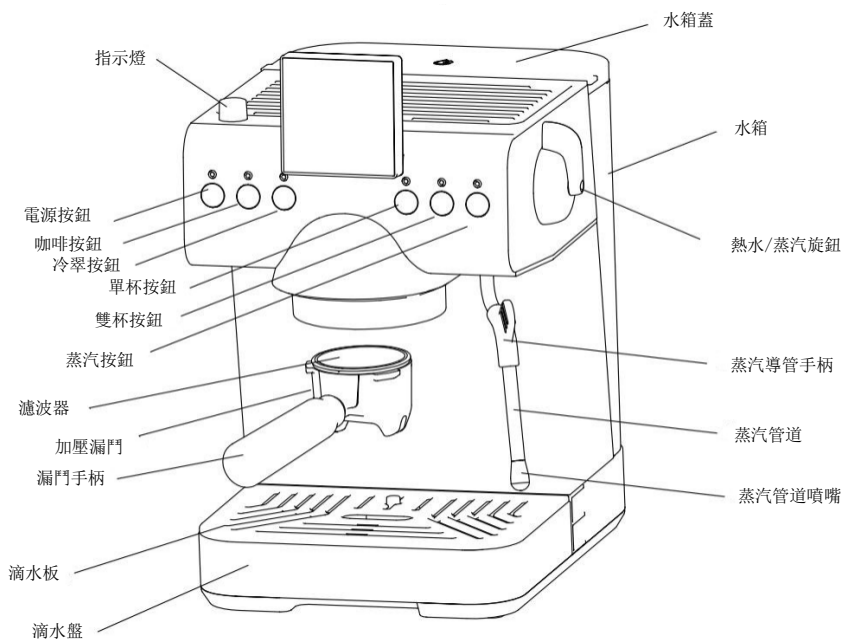

數字顯示屏說明：

 - a. 煮咖啡時間
- b. 系統壓力（缺水時壓力值會閃爍）
- c. 咖啡量
- d. 系統溫度
- e. 單杯咖啡
- f. 雙杯咖啡
- g. 咖啡沖煮過程

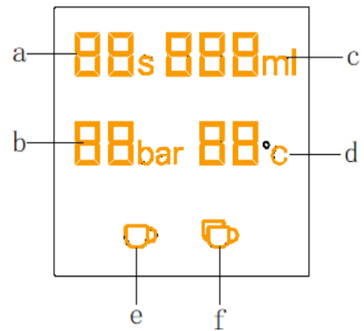

首次使用前

為確保第一杯咖啡的絕佳風味，您應該按如下方法用溫水沖洗咖啡機

1. 取下水箱底部的橡膠塞。
2. 往水箱中倒水，水位不應超過水箱內的“MAX”標記。
注意：本設備配有可拆卸水箱，便於清潔，您可以先將水箱注滿水，然後再將水箱放入設備中。
3. 將鋼網放入金屬漏斗（鋼網中不要放咖啡）。
4. 將壺放在可拆卸托盤上。確保蒸汽控制旋鈕處於關閉位置。
5. 連接電源，按一下電源按鈕，電源指示燈亮起，設備進入預熱模式。然後頂部的黃色指示燈亮起，當咖啡指示燈變為常亮時預熱完成。
6. 按一下雙杯按鈕，一會兒後水會從漏斗出口流出。當設備自動停止抽水時，您可以清潔配件，然後倒出廢水。
注意：若要製作冷萃咖啡，打開咖啡機後直接按下冷萃按鈕。頂部的指示燈變為藍色。然後按下雙杯按鈕讓設備產水。清潔配件後倒出廢水。

準備製作咖啡

熱飲：為了製作出美味的熱濃縮咖啡，我們建議您在製作咖啡之前，先將咖啡機預熱，包括漏斗、過濾器 and 杯子，這樣可以避免咖啡風味受到冷部件的影響。

冷飲：將冷水加入水箱，溫度約在10-15°C，按下冷萃按鈕，然後按下單杯或雙杯按鈕來製作冷飲。

1. 取下可拆卸的水箱，注入所需的水，水位不應超過水箱上的“MAX”標記。然後將水箱正確放入設備中。
2. 選擇蒸汽網，將鋼網放入金屬漏斗中，確保漏斗上的管道與設備中的凹槽對準，然後從“插入”位置將漏斗插入設備中。將它們逆時針旋轉固定到咖啡機上直到到達“鎖定”位置。
3. 將一個濃縮杯放在可拆卸的架子上。
4. 然後將設備連接到電源供應。確保蒸汽控制旋鈕處於關閉位置。

5. 連接電源並按一次電源按鈕，電源指示燈亮起。如果您只想製作熱飲，按下咖啡 按鈕，讓設備進入預熱模式。當咖啡指示燈常亮時，預熱完成。如果您想製作冷飲，按下冷萃按鈕，冷萃指示燈常亮。冷萃模式不需要預熱。

濃縮咖啡萃取指南

一杯好的咖啡應該保持酸度、香氣、濃度和苦味的平衡。而優質的濃縮咖啡需要適當的咖啡粉粗細和壓粉力度。

1. 順時針旋轉以移除漏斗，將濾網放入漏斗內。將研磨好的咖啡粉倒入濾網中，然後使用壓粉器將粉末壓平。接著從漏斗和濾網的邊緣 擦拭掉多餘的咖啡粉。

警告：記得要讓加熱過的金屬濾網冷卻，以避免燙傷。

添加咖啡粉

按照上述方法將濾網放入漏斗內：

- a. 將濾紙裝滿新研磨的濃縮咖啡粉；
- b. 輕輕壓實粉末（建議單杯使用14克粉末，雙杯使用20克粉末。如果漏斗內填充過多粉末，可能無法安裝到咖啡機上，並且咖啡流速會 加快，影響咖啡口味並導致咖啡渣中含水量過多。）；
- c. 擦拭漏斗邊緣上剩餘的咖啡粉。

2. 根據咖啡機上的“插入”標記安裝漏斗，然後逆時針旋轉至“鎖定”標記。

3. 在杯墊上放一個暖杯。（煮熱水加熱杯子，倒出水後才進行咖啡沖泡。製作冷飲時無需加熱杯子。）

4. 按下單杯或雙杯按鈕一次，咖啡將從出口流出。

5. 當達到設定的咖啡量時，設備會自動停止，咖啡製作完成。


6. 濃縮咖啡的最佳沖泡壓力為8-13巴。當數位顯示管顯示最佳壓力範圍時，可以製作出一杯好的咖啡。如果當前壓力超出標準範圍，請調整咖啡粉的粗細度和壓粉壓力。

警告：在製作咖啡時，不要讓咖啡機無人看管，因為有時需要手動操作！

7. 咖啡製作後稍等片刻，順時針旋轉漏斗以移除它從設備中，倒出咖啡渣。


8. 讓漏斗和濾紙充分冷卻，然後用清水徹底沖洗乾淨。

製作熱水

熱水製作完成後，將旋鈕轉至“”位置，然後熱水將從蒸氣管噴出。當獲得所需量的熱水後，將旋鈕關閉。在製作熱水之前，請將杯子放在蒸氣管下方。

製作卡布奇諾/打奶泡

製作卡布奇諾/打奶泡的方法如下：

1. 根據“**濃縮咖啡萃取指南**”中的指示，使用提供的奶杯製作一杯濃縮咖啡。
2. 按下蒸氣按鈕一次，蒸氣指示燈會像呼吸燈一樣閃爍。當蒸氣指示燈保持穩定亮起時，蒸氣預熱完成。
3. 在奶泡杯中加入約150毫升冷藏全脂牛奶（請勿使用熱牛奶）。
4. 將蒸氣管伸入牛奶中。將旋鈕轉至“”位置，蒸氣從蒸氣管中噴出。將蒸氣管靠近牛奶表面，以一定角度傾斜，使空氣進入液體，開始打奶泡。（在打奶泡之前，使用額外的空杯收集蒸氣，持續約10秒，直到蒸氣噴射穩定）
5. 將旋鈕轉回“OFF”位置。

停止/休眠功能

1. 當熱水分配到200毫升時，水泵會自動停止，咖啡指示燈會快速閃爍。
2. 當蒸汽功能運行180秒時，水泵會自動停止，蒸汽指示燈會快速閃爍。
3. 在機器啟動後的任何狀態下，若25分鐘內沒有操作，機器將進入睡眠模式。此時，所有指示燈將熄滅，加熱元件將不會加熱，整個機器將被關機。按下任何按鈕可退出睡眠模式並重新啟動機器。

清潔與保養

1. 清潔前，請拔掉電源插頭並等待機器完全冷卻。
2. 使用防潮海綿擦拭咖啡機的機身，並定期清潔和晾乾水箱、滴水盤和可拆卸的杯墊。

注意：請勿使用含酒精或溶劑的清潔劑進行清潔。請勿將主機浸入水中。

3. 取下漏斗並倒掉咖啡渣。使用清潔液和棉布清潔漏斗和過濾器，並沖洗各個部件。
4. 將所有配件在清水下沖洗乾淨並徹底晾乾。
5. 定期使用清潔探針清潔蒸汽噴嘴和過濾器。

任何其他維修工作應由授權的服務代表進行。

清潔礦物沉積

1. 當咖啡、蒸汽和熱水功能的累計用水量超過30公升時，產品的所有指示燈將同時閃爍5次，表示需要進行除垢，然後恢復正常。如果不取消提示，每次開機和預熱後都會閃爍5次提醒。
2. 當出現除垢提示時，需在水箱中加入適量的除垢劑，使用熱水和咖啡功能來進行除垢。如果不進行除垢，每次開機後指示燈將閃爍5次提醒。如果連續3次沒有手動取消提示，除垢提示將自動清除。
3. 取消除垢提示：同時按住電源按鈕和蒸汽按鈕3秒鐘，所有指示燈快速閃爍3次。

疑難解答

症狀	原因	修正
機器中的金屬部件生鏽。	不推薦使用除垢劑類型。它可能會腐蝕機器中的金屬部件。	使用製造商推薦的除鏽劑
咖啡機底部漏水。	滴水盤裡有很多水。	請清潔滴水盤。
	咖啡機出現故障。	請聯繫授權服務機構進行維修。

水從濾波器外側漏出。	過濾器邊緣殘留咖啡粉	清理它們
酸（醋）味存在於濃縮咖啡	清潔礦物質沉積物后未正確清潔	根據“第一次使用前”的內容清潔咖啡機多次
	咖啡粉長時間存放在濕熱的地方；咖啡粉變質了	請使用新鮮的咖啡粉，或將未使用的咖啡粉存放在陰涼乾燥的地方。打開一包咖啡粉后，重新密封並存放在冰箱中以保持其新鮮度
咖啡機不能工作了	電源插座沒有插好	將電源線正確插入牆上插座，如果設備仍然無法正常工作，請聯繫授權服務機構進行維修
蒸汽不能起泡	蒸汽就緒指示燈不亮	只有在蒸汽就緒指示器亮起后，蒸汽才能用於起泡
	容器太大或形狀不合適	使用又高又窄的杯子
	您使用過脫脂牛奶	使用全脂牛奶或半脫脂牛奶

如果沒有找到故障原因，請勿自行拆開設備，您最好聯繫經過認證的服務中心。

環保處置



您可以為保護環境做出貢獻！
請記住遵守當地法規：將不工作的電氣設備交給適當的廢物處理中心。